



137. *Cord-link stitch.* Knit four or six rows on twenty needles in the front of the machine, leaving one needle groove empty between the needles ; make a very loose long stitch ; leave the yarn-carrier to the right ; lift out of action the

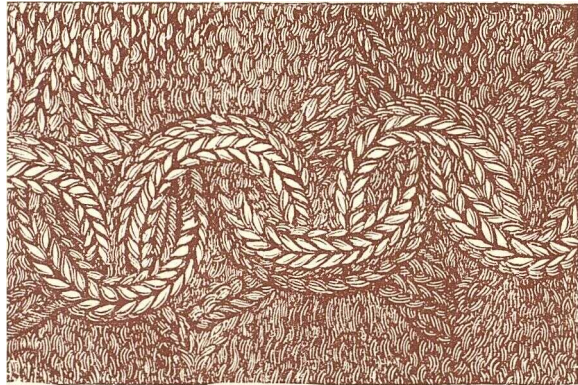

needles to the left, and knit across to the left ; now lift out of action the five needles on the right ; knit thirty rows on the five needles down, holding down the work by hand, and leave the yarn-carrier on the left ;


press down the five needles on the right and knit across to the right ; now push down the ten needles to the left and knit six rows on all the needles ; now raise up one-half the needles on the right and knit across to the right ; lift up the five needles on the left ; knit thirty rows on the five needles down and break off the yarn and run off the stitches of the five needles and keep the stripe through the first stripe and cast the stitches upon the same needles without twisting them ; join the yarn and depress the needles up and knit six rows, and so on. Continue the desired length to be knit. Any number of needles can be used, and the links made any length desired. This link is very useful for afghans, sofa pillow covers, mats, tidies, etc. The link can be joined in any manner to suit the taste of the operator.

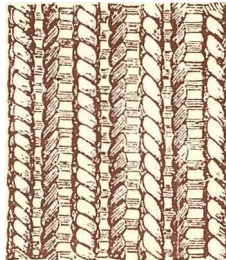

138. *Rope and cord pattern.* Knit three or four rows plain ; lift the stitches off every other needle and place them on the next needle on the left, and knit one row of stitches : lift the new loops formed on the

empty needles on to the next needle on the left, and leave the loops on their own needles as well, which will place these loops on the two needles. Every row of new stitches, lift the loop off the needles first emptied of their loops, on to the next needle, allowing it to remain on its own needle as well.

139. *Dew-drop stitch.* Knit three or four rows of stitches plain ; lift the stitch from the second needle and put it on the third ; lift the stitch from the sixth needle and place it upon the fifth ; lift the stitch from the eighth needle and put it on the ninth, and the stitch from the twelfth needle and put it on the eleventh ; and so on across the web in each of the successive changes, knit one row. Now take the stitch off the third needle and put it on the fourth, and the stitch off the fifth needle and put it on the fourth needle ; also lift the stitches off the ninth and eleventh needles and put them on the tenth needle, and knit one row. Now take the loop off the third needle and put it on the second needle, and the loop off the fifth needle and put it on the sixth needle, and the ninth needle loop on to the eighth needle, and the loop off the eleventh and put it on to the

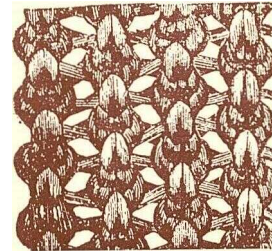

twelfth needle, and knit one row. Again, take the stitch off the second needle and put it on the first needle, and the stitches off the sixth and eighth needles and put them on the seventh, and the stitch off the twelfth needle on to the thirteenth, and so on. Repeat from the first again.

140. *Cable-pattern.* Knit three or four rows of stitches plain ; cross the stitches of the second and fourth needles upon each other, and the stitches sixth and eighth in the same manner, all across the web as in preceding pattern. Knit two rows of stitches and repeat the interchanging of the stitches on the same needles, and knit in this manner the desired length.

